# **Fuse Monitor with Alarm output**

2 Phase or 3 Phase option Fuse Monitoring Module (3 Leg) N/C Alarm

CONTACT US: ♥ 0044 (0) 1704-516 501 ⊠ enquiries@united-automation.com ♥ www.united-automation.com

## **KEY FEATURES:**

**APPLICATIONS:** 

- Individual Phase LED for each fuse
- Power ON LED for system status
- Resettable Alarm output
- ✓ Simple DIN rail mounting
  ✓ 5V DC low-voltage operation

This unit has been designed to

channels versions for 2/3 option

or full 3 phase systems.

identify and provide an alarm output when a fuse fails. Offering 2 channel or 3 The **Fuse Fail Indicator** is a reliable DIN rail-mounted fuse monitor designed to promptly identify fuse failures in various applications, minimising downtime and enhancing operational efficiency.

Operating on a low 5V DC supply, it features a **Green Power LED** to confirm power status and **three RED LEDs** that illuminate to indicate specific fuse failures.


An alarm output is activated upon detection of a blown fuse, which resets once the unit is power cycled, eliminating the need for component replacement.

An alarm output is also activated in the event that the unit loses power – alerting the user.

Ideal for two or three-phase systems, this indicator offers precise, lowmaintenance monitoring.

TE	TECHNICAL SPECIFICATIONS			
	Supply	5VDC		
	Alarm Relay	Normal Closed or Normally Open		
	Current Consumption	No Fault – 46mA		
		1 Phase Fault – 8mA		
		2 Phase Fault – 12mA		
		3 Phase Fault – 17mA		
	Mounting	DIN RAIL		
	Dimensions (H x W x D)	(94 x 73 x 46) mm		

# **INSTALLATION & CONNECTIONS**

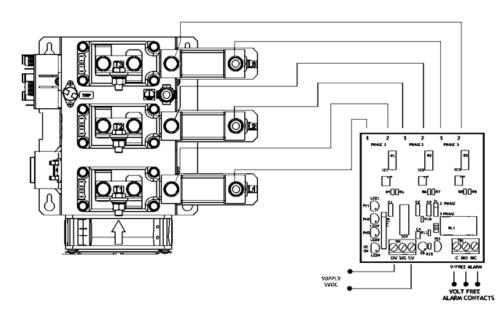

#### YOU MUST READ THIS BEFORE INSTALLATION

#### ELECTRICAL SAFETY

WARNING: RISK OF ELECTRIC SHOCK

Always consult the Installation & Maintenance Instructions before connecting this product to the power supply. WARNING: Disconnect Power Before Servicing Ensure the electrical supply is safely disconnected before connecting to any supply, load, or control terminals. INSTALLATION REQUIREMENTS

WARNING: Installation by Qualified Personnel Only This product must only be installed or fitted by a competent, qualified installer familiar with the relevant electrical standards and

installation practices.

USER RESTRICTIONS

 $(\mathcal{X})$ 

WARNING: Not for Use by Vulnerable Individuals This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or instructed by a person responsible for their safety.



HOT SURFACE WARNING

WARNING: Hot Surfaces On certain models, surfaces marked with this symbol become hot during use. Avoid direct contact and follow all thermal safety precautions.



# **Fuse Monitor with Alarm output**

2 Phase or 3 Phase option Fuse Monitoring Module (3 Leg) N/C Alarm

### DIMENSIONS



## **DOCUMENTS**

Other documents available on request, which may be appropriate for your application:

Code	Identity	Description
P01.1	COS	UAL Conditions of Sale

It is recommended that installation and maintenance of this equipment should be done with reference to the current edition of the I.E.T. regulations (BS7671) by suitably qualified/trained personnel. The regulations contain important requirements regarding the safety of electrical equipment. For International standards refer STANDARDS on D of C.

PRODUCT CODE AND RELATED PRODUCT CODE		
Product Code	Product Description	
A403138	Fuse Monitoring Module (3 Leg) N/C Alarm	



Contact Us: ① 0044 (0) 1704-516 501 ⊠ enquiries@united-automation.com ( www.united-automation.com

