

ELECTRIC PATIO HEATER WITH REMOTE CONTROL MOUNTING AND OPERATING INSTRUCTIONS

Introduction

The patio heater is designed for indoor and outdoor use, to provide radiant heat which warms people and objects rather than the air in between. It is mounted on an adjustable bracket that allows the heat to be directed exactly where it is required. Its attractive, light weight design means that it is effective yet unobtrusive.

 
Please read the following instructions carefully before use. The safety of this heater is guaranteed only by its correct usage in accordance with these instructions, therefore it is recommended that they are retained for future reference.

Important Safety Instructions

- Before using this appliance:

1. Check that the voltage indicated on the type plate corresponds to the mains supply voltage.
2. Ensure that the heater has been securely fixed to the wall using the mounting bracket.

- Do not handle the halogen lamp with bare hands. If it is inadvertently touched, remove finger marks with a soft cloth and methylated spirit or alcohol, otherwise the marks will burn into the quartz, causing premature heater failure.

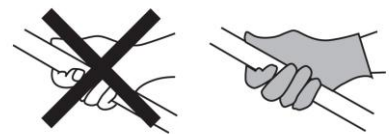

- Always plug heaters directly into a wall plug. Do not use with a coiled cable or extension cable with this product.
- Keep the mains cable away from the body of the heater which will get hot during use.
- Do not cover or obstruct the heater when in use.
- Children of less than 3 years should be kept away unless continuously supervised.
- Do not insert any object through any slot or opening in the heater.

-CAUTION – Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present

- Fire risk exists if this heater is covered by or positioned close to curtains or other combustible materials. Always keep heater at least one metre (1m) from combustible materials.
- The heater must not be located immediately below a socket-outlet.
- Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- **WARNING:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the

room on their own, unless constant supervision is provided.

- Turn off the electricity, remove the plug from the outlet when not in use.
- Do not try to repair by yourself if it is broken (such as cord, plug etc), please contact the service agent for maintenance.
- Check if the voltage indicated on the nameplate of the appliance corresponds to the local mains voltage before you connect the appliance.

Installation Instructions

The heater is fitted with a supply cable and moulded plug, therefore the terminals should not be interfered with.

The following points should be considered when positioning the heater:

- Please observe the minimum safe distance between the heater body and any inflammable surfaces.
- Do not position the heater at an angle of more than 70° from the rear wall (See Fig.1).
- If in any doubt, Please contact a suitably qualified electrician.
- Keep out of the reach of children.
- Do not position this heater near to furniture or curtains as this could present a fire hazard.
- The heater must not be located below a socket-outlet.

1. Securely fasten the bracket to the mounting surface using the fixing in the bracket.
2. Fix in the required angular position by tightening the fixing bolt on the bracket at the rear of the heater.

3. The bracket can be used to adjust the direction of the heater up and down (See Fig.2).

This is done by loosening the bolts fixing the heater to the bracket, and then retightening once the correct position is achieved.

Always isolate the heater from the mains supply when adjusting the angular position.

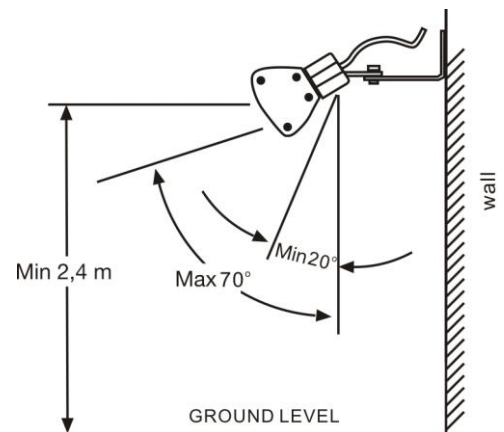 


Fig1.

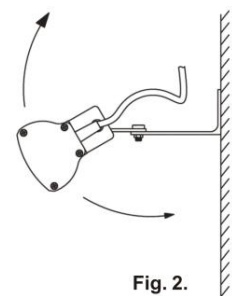 


Fig. 2.

- In the event of heater failure, or for spare parts or advice, please contact the manufacture in the first instance.
- Disconnect from the mains before commencing any maintenance procedure including cleaning.
- To ensure optimum heat effectiveness, it is recommended that after the heater has been used for approximately 80-100 hours, that the guard and lamp are removed and the reflector is wiped with a lint-free cloth before reassembling.

- If the supply cord becomes damaged, it must be replaced by the manufacturer, its service agent or a similar qualified person.

Specifications

Voltage: 230V

Power: 2000W

Weight: 3Kgs

IP Rate: IPX5

Battery type: 2 x AAA size 1.5V

Dimensions LxWxH (mm): 674x120x120mm

Remote Control Instructions

The heater is operated with a remote control.

ON: Turn on the heater

OFF: Turn off the heater

MIX: 50% power output.

MID: 75% power output.

MAX: 100% power output.

Operating distance of remote control is approx. 5 m

Operating angle of remote control is 35°

Operation Instructions

- 1 Put 2 AAA batteries into the remote control.
- 2 Connect the power cord plug with an AC outlet
- 3 Be sure the rocker switch of heater is in the ON position.
- 4 Point the remote at the heater.
- 5 Press the on button of remote control.
- 6 Choose a suitable power output.
- 5 Press the Off button on the remote control after use.
- 6 Turn the rocker switch off
- 7 Pull out the power cord plug from the outlet
- 8 Remove the batteries from the remote control if the heater is not used for a while.

The Heater Does Not Work

1. Check the connection between power cord plug and AC outlet.
2. Be sure the rocker switch of heater is in the ON position
3. Ensure that the batteries in remote control is properly inserted. If the battery is old, replace them with new batteries.

Cleaning and Maintenance

- This appliance is manufactured from robust and maintenance-free aluminum with a protective cover. There are no user serviceable parts inside.
- Before cleaning, remove the plug from the power outlet and wait until the appliance is sufficiently cooled off.
- Wipe the appliance only with clean and lint-free cloth or a soft brush.
- Never use abrasive cleaners, scrubbing brushes and chemical cleaners for cleaning!
- To protect against electrical shock and danger to life, do not immerse the cord, plug, or any part of this heater in water or any other liquid.
- For heating element replacement, please contact the manufacturer or its service agent or a similarly qualified persons.
- For any other repairs, please contact the sales agent or a suitably qualified electrician.

Storage

When not in use, store this unit in a cool, dry location. To prevent dust and dirt build-up, use the original packing to repack this unit.

Disposal



This symbol on the product or on its packaging indicates that this product should not be disposed of with your normal household waste.

The separate collection and recycling of your waste electrical equipment at the time of its disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.



Warning:

The lamp **MUST** be installed in a horizontal orientation. Never install it vertically, as this may lead to overheating or damage.